


WATERPROOF END CAP

Install the flooring leaving a 1-1/4" gap between the two floor surfaces for the end cap installation.

2. Measure and trim to fit.


Center the track between the flooring leaving a 1/4" spacing between the track and floor planks. Screw track to subfloor using included screws (or glue down with construction adhesive).

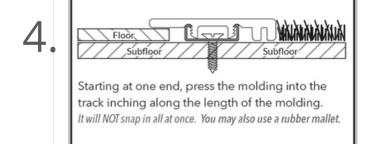

TRANSITION INSTALLATION

Width: 1.5" Height: 0.25"

Length: 94"

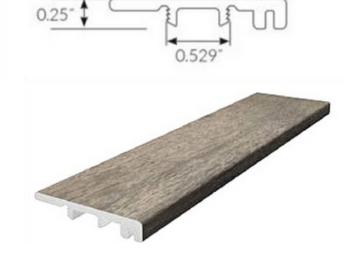

1.5"

DESCRIPTION:

This waterproof end cap is used to fill the gap between the floor and carpet, hearths or against sliding doors.

To be used with floors ranging from 2-6mm in height.

