



## WATERPROOF MULTI-TRIM

Install the flooring leaving a 1 1/8" gap between the two floors for the installation.

Measure and trim to fit.


Draw a line down the center of the space between floors. Drill 1/4" holes along the line, approximately 15" apart.

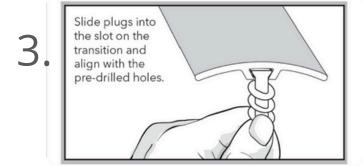


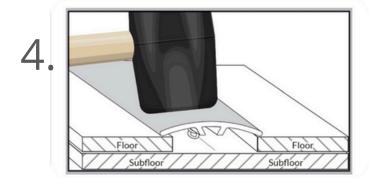

## TRANSITION INSTALLATION

Width: 1.6" Height: 0.2"

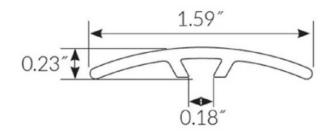

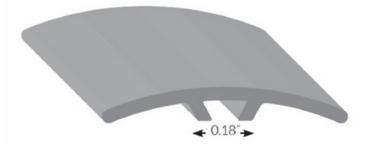

## **DESCRIPTION:**

This multi-trim can be used for both floors of equal and unequal height. It automatically adjusts to varying heights allowing it to also be used as a surface reducer.

Automatically adjusts to varying heights.

