


WATERPROOF STAIRNOSE

1.

Measure and trim to fit.

Apply a generous bead of construction adhesive along the underside of the stair nose.

Carefully roll the stair nose into place against the front of the step, making sure the transition is in place. Once the transition is in its desired position, press down firmly over the entire stair nose, making certain the transition is in place and tight against the riser. For added security, use finishing nails.

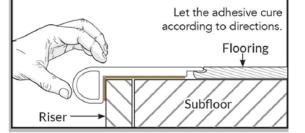



TRANSITION INSTALLATION

Width: 2.75"

Height: 0.75"

Length: 94"

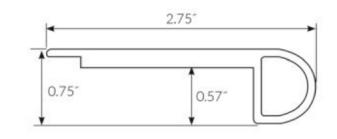

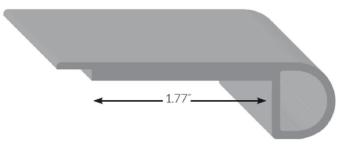

DESCRIPTION:

Used to finish the end of a step.

*Flush Installation

